



User's manual

20V - 2.0 Ah and 4.0 Ah

Li-ion BATTERIES



SBP2020 - SBP2040



Operating Instructions

Please read the operation instructions meticulously and pay particular attention to the safety instructions.

CONTENT

Description of Symbols	1
Technical Abbreviations Key	1
Specification	2
Battery Safety	2
Instructions	3
Disposal	3
Warranty	4

This manual contains information necessary for safe and effective operation of this product. This product has unique features and, even if you are familiar with similar products, it is necessary to read this manual carefully to ensure you fully understand the instructions. Ensure all users of the tool read and fully understand this manual.

Description of Symbols

	<p>Wear hearing protection</p> <p>Wear eye protection</p> <p>Wear breathing protection</p> <p>Wear head protection</p>
	<p>Caution!</p>
	<p>DO NOT incinerate batteries!</p>
	<p>Read instruction manual</p>
 LI-Ion	<p>Li-ion battery cells are recyclable and should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice</p>

Technical Abbreviations Key

V	Volts
~	Alternating current
A	Ampere
n0	No load speed
Hz	Hertz
W, kW	Watt, kilowatt
/min or min⁻¹	(revolutions or reciprocation) per minute

Specification

SBP2020

Stromspannung // Voltage	20V
Ampere Stunde // Amperes hour	2.0Ah
Ladezeit // Charging time	1 Hour
Gewicht // weight	0.40 Kg
Maße // Dimensions (LxWxH):	117 x 80 x 52mm

SBP2040

Stromspannung // Voltage	20V
Ampere Stunde // Amperes hour	4.0Ah
Ladezeit // Charging time	1 Hour
Gewicht // weight	0.60 Kg
Maße // Dimensions (LxWxH):	120 x 80 x 80mm

Battery Safety

WARNING: Li-Ion batteries, if incorrectly used, stored or charged are a fire, burn and explosion hazard.

- Keep the battery out of reach of children.
- Only charge Li-Ion batteries using the charger provided or designed specifically for your product.
- Only use Li-Ion batteries provided with a product or specifically designed to be compatible.
- Allow batteries to cool for 15 minutes after charging or heavy use. Failure to follow these instructions may cause overheating or fire.
- When not in use batteries should be stored at room temperature (approximately 20°C/68°F).
- Ensure that battery contacts cannot accidentally short in storage. Keep batteries clean; foreign objects or dirt may cause a short. Keep away from other metal objects, for example paperclips, coins, keys, nails and screws.
- Under abusive conditions, liquid may be ejected from the battery. This liquid may cause skin irritation or burns. Avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help.
- DO NOT open, disassemble, crush, heat above 60°C or incinerate. Do not dispose of in fire or similar.

Instructions

Please note the following:

- The battery is supplied in a low charge condition. Charge before use.
- Only charge this battery with the charger provided with your power tool.
- Refer to the main manual provided with your charger or power tool for charging instructions.
- Remove the battery as soon as possible from the charger when fully charged.

Disposal

Always adhere to national regulations when disposing of batteries that are no longer functional.

- Discharge batteries before disposal.
- DO NOT dispose of batteries with household waste.
- DO NOT dispose of by incineration, which may release toxic materials or gases plus a risk of explosion.
- Contact your local waste disposal authority for information on the correct way to dispose of batteries.

SIEFKEN

INDUSTRIELL



3 YEAR WARRANTY

Each tool SIEFKEN INDUSTRIELL has warranty to the original buyer from being free of defects in materials and labor.

Its subjected to certain exceptions, SIEFKEN will fix or replace any part of any power tool, after examined, and if its determined by siefkenn like material defective or labor by a period of (3) years*, after the date of the purchase, at least theres any other thing pointed out. The power tool must be returned to the SIEFKEN service center location or the service center authorized by SIEFKEN, the shipment must be paid and secure. Must include a copy of the proof of purchase with the returned product. This warranty does not apply to damages that SIEFKEN determines that are as a result of maintenance done by someone who does not belonged to siefken service center or associates, also by incorrect use, alterations, abuse, natural usage nor accidents.

FREE SERVICE

Siefken includes in its tools 5 free preventive maintenance by year during the warranty time of the tool.

Also, any corrective service will have a 1 year warranty. (Does not apply for service done by any person that does not belong to the siefken staff, also like damaged made by incorrect use, alterations, abuse, natural usage nor accidents)

TOTAL SATISFACTION

If the siefken tool do not satisfies the need in work, during the 30 days after your purchase you will be able to change your power tool with on of the same reference but with more capacity just by paying the difference.

To make this warranty valid you should present the warranty policy sealed or the original invoice and return the entire product, without any damages, with its accessories and original packaging to the distribution network or service centers.

SIEFKEN[®]
INDUSTRIELL