



User's manual

BATTERY CHARGER



SPP20ULTRA



Operating Instructions

Please read the operation instructions meticulously and pay particular attention to the safety instructions.



Care for the environment!

Must not be discarded with household waste! This product contains electrical or electronic components that should be recycled. Leave the product for recycling at the designated station e.g. the local authority's recycling station.

CONTENT

ENGLISH.....	17
SAFETY INSTRUCTIONS.....	17
SYMBOLS	18
TECHNICAL	18
USE.....	18
BATTERY	18
MAINTENANCE.....	20



SAFETY INSTRUCTIONS

Read the operating instructions carefully before use.

Save them for future reference.

- The battery charger is only intended for use indoors in dry, well ventilated areas.
- Never try to charge non-rechargeable batteries.
- Never attempt to charge batteries not intended to be used with this charger.
- If the battery charger's power cord is damaged it must be replaced by the manufacturer or an authorised service centre to prevent the risk of electric shock.
- The battery charger is not intended to be used by persons (children or adults) with any form of functional disorders, or by persons who do not have sufficient experience or knowledge on how to use it, unless they have received instructions concerning the use of the appliance by someone who is responsible for their safety.
- Keep small children under supervision to make sure they do not play with the battery charger.
- Unplug the plug from the power point before inserting or removing the battery.
- Never leave the battery charger switched on without supervision – risk of fire and electric shock.
- Protect the battery charger from moisture.
- Never immerse the battery charger in water or any other liquid, or use it where there is a risk of it being exposed to water, or falling into water.
- **WARNING:** Explosive gas. Avoid sparks and naked flames. Make sure there is adequate ventilation when using the battery charger.
- Connect the battery charger to an easily accessible power point in the immediate vicinity.
- The battery charger is only intended for household use, not for commercial use.

SYMBOLS

	Read the operating instructions carefully before use. Save them for future reference.
	For indoor use only.

Input voltage _____	230–240 V, 50–60 Hz
Output _____	40 W
Output voltage _____	14.4–18 VDC
Output current _____	1.5 A
Safety class _____	II
Protection rating _____	IPX0
Battery type _____	Lithium
Cells (number and voltage) _____	4 x 3.6 VDC
Battery capacity _____	1.3 Ah

USE

BATTERY

NOTE:

- Make sure that the power switch on the tool is not pressed in when inserting or replacing the battery.
- Do not force the battery when connecting it, use a moderate pressure. An incorrectly connected battery can damage the battery terminals or the battery socket on the tool.
- Use the "Press" button on the battery to check the charging status; 1-4 red LEDs, where 1 indicates low battery status.



Charging the battery

NOTE:

- The battery must be charged before it can be used with a tool.
- After charging for the first time, use the tool until the battery is completely discharged. Repeat this charging and discharging cycle 4 to 5 times.
- If the LEDs on the charger do not go on when charging:
 - check that the charger's mains adapter is properly plugged into the power point and that the charger is switched on
 - check that the battery is correctly inserted in the charger

1. Place the battery charger on a level and stable surface. Plug the charger into a 230 V power point.
2. Connect the battery to the charger so that it clicks into place. The red LED lights up on the charger when correct contact is made.



3. When the battery is fully charged, after about an hour, the red LED goes off and only the green LED stays on.

4. Unplug the charger cord from the power point and remove the battery from the charger. Connecting the battery

1. Connect the battery to the battery socket on the tool so that it clicks into place.



Removing the battery

1. Press the battery lock and remove the battery from the tool.

MAINTENANCE NOTE: Always unplug the battery charger from the mains before cleaning.

- Clean with a dry cloth.

SIEFKEN

INDUSTRIELL



3 YEAR WARRANTY

Each tool SIEFKEN INDUSTRIELL has warranty to the original buyer from being free of defects in materials and labor.

Its subjected to certain exceptions, SIEFKEN will fix or replace any part of any power tool, after examined, and if its determined by siefkenn like material defective or labor by a period of (3) years*, after the date of the purchase, at least theres any other thing pointed out. The power tool must be returned to the SIEFKEN service center location or the service center authorized by SIEFKEN, the shipment must be paid and secure. Must include a copy of the proof of purchase with the returned product. This warranty does not apply to damages that SIEFKEN determines that are as a result of maintenance done by someone who does not belonged to siefken service center or associates, also by incorrect use, alterations, abuse, natural usage nor accidents.

FREE SERVICE

Siefken includes in its tools 5 free preventive maintenance by year during the warranty time of the tool.

Also, any corrective service will have a 1 year warranty. (Does not apply for service done by any person that does not belong to the siefken staff, also like damaged made by incorrect use, alterations, abuse, natural usage nor accidents)

TOTAL SATISFACTION

If the siefken tool do not satisfies the need in work, during the 30 days after your purchase you will be able to change your power tool with on of the same reference but with more capacity just by paying the difference.

To make this warranty valid you should present the warranty policy sealed or the original invoice and return the entire product, without any damages, with its accessories and original packaging to the distribution network or service centers.

SIEFKEN[®]
INDUSTRIELL